

divacore®
nomad system



BLUE LAGOON
«WARRANTY 1 YEAR»

www.divacore.com

BLUE LAGOON

The new **BLUE LAGOON Bluetooth® speaker** by **DIVACORE® Nomad System** makes you listen to your favorite music, movies and videos, wherever you are.

Wireless Nomad Speaker

Directly control your volume and your tracks with your bluetooth device.
Hands-free kit with Built-in microphone:
You can easily answer / end your Call from your speaker.

Fully compatible with all mobile devices.
Add a soundtrack to whatever you do.

About DIVACORE® Nomad System

With his headquarter based at Europe's crossroad, DIVACORE® Nomad System is focused on innovation, multimedia and audio.

Our ability to anticipate expectations will symbolize the success of our company.
Main objective of DIVACORE® Nomad System is to anticipate lifestyle's evolutions and offer ideal solutions for our multimedia systems all turned portable and nomad.
Exceptional and powerful sound, incredible battery life, the quality of our products is outstanding and we will always offer you the latest features existing.


DIVACORE® Nomad System:
Leading Nomad Speakers.

Contents

Your package should contain all items listed below.
If any items are missing, please contact your retailer.

Packing list

1X Bluetooth Speaker
1X User Manual FR
1X User Manual EN
1X Transport Bag
1X USB + Audio Connector

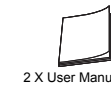

2 X User Manual(FR+EN)



USB + Audio Connector



Blue Lagoon speaker




Transport Bag



⚠ This cable is not compatible for data connectivity with other device.


WARNING ! This device contains an internal power supply.
Please read the manual carefully before usage.

Charging

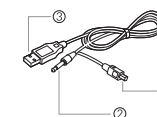

USB + Audio Connector

- 1 - Mini USB : charge/Audio input
- 2 - 3.5mm audio plug
- 3 - USB connector

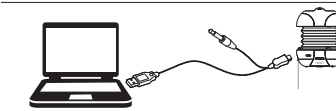

To charge your speaker :
1 - Connect the Mini USB cable to your speaker.
2 - Connect the USB connector to your computer (or USB charger)
While the battery is charging, the LED light will glow RED.
Once Charged, the LED light will turn BLUE.

Charging time: 1.5 – 2 hours

Autonomy : up to 12h



⚠ This cable is not compatible for data connectivity with other devices.

Playing Music

Wired connection

Connect your speaker to any device using the USB cable and the 3.5 mm audio jack :

- 1 - Slide the power switch to LINE mode.
- 2 - Connect the mini USB to your speaker.
- 3 - Connect the 3.5 mm audio jack to your audio device.
- 4 - Enjoy !




Bluetooth – Wireless

You can also enjoy the music without the limitations of a wire !
1 - Slide the power switch to Bluetooth mode.

- 2 - Use your device to discover your speaker.
- 3 - If prompted to input a code or a key, enter « 0000 ».
- 4 - Once connected : you can use your speaker to play music, or as a hands free device.



Key Functions

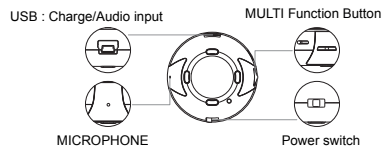

MULTI Function Button

Hands Free

To answer a call : press the volume up/down button
To end a call : press again the volume up/down button


Volume Up/Down

Volume Up : rotate and hold the MULTI button to the right
Volume Down : rotate and hold the MULTI button to the left

Skip Forward/Backward

Next song : flick the MULTI button to the right
Previous song : flick the MULTI button to the left

Core Active Bass

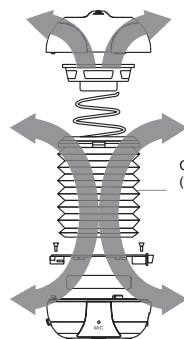

Core Active Bass
(patented technology)

How to open/close the speaker

Open – To listen

Step 1



Hold the speaker firmly by its base and top cap.

Step 2



Turn top cap anti clockwise (5 mm)

Step 3



The top cap will spring up to expand the speaker.
Now, enjoy the superb bass delivered via: Core Active Bass system.

Close - To travel

Step 4 **Shift top cap and base to avoid any broken clip.**



Hold speaker firmly by its base & press top cap toward speaker base.

Step 5



Turn top cap clockwise (5mm)


Don't press top and base parallel to avoid any broken clip.

Specifications

Model : **BLUE LAGOON – DVC4501**
Dimensions : Diam. 65 mm x (height) x 49 mm
Net Weight : 99.4 g
Speaker : Diam. 45 mm
Input sensitivity : L/R 380 mV
Power : 3.2 W
Charge Voltage : 5V +/- 0.5V
Frequency : 280 Hz – 16 KHz
Charging time : 1.5 - 2 hours
Playing time : 12 hours
Suitable temperature : 0°C – 40° C



Caution: Pulling the flexible resonator beyond its normal range can permanently damage the speaker.

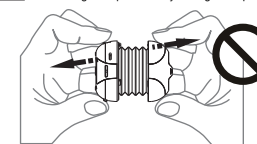

divacore®
nomad system

© Copyright 2011
All rights reserved
Manual v. 2 , Oct 2012